

SPECIFICATION

MODEL

NOTE



SPV-1500-12

#### Features :

- Universal AC input/Full range
- ZVS new technology
- · AC input active surge current limiting
- Built-in active PFC function, PF>0.95
- · Protections: Short circuit / Overload / Over voltage / Over temperature
- · Forced air cooling by built-in DC ball bearing fan
- High power density 8.3W/inch³
- Output voltage can be trimmed between 20% ~ 110% rated value
- Current sharing up to 4500W(2+1)
- Alarm signal output
- Built-in 12V/0.1A auxiliary output for remote control
- · Built-in remote ON-OFF control
- Built-in remote sense function
- 3 years warranty

SPV-1500-24



SPV-1500-48

#### DC VOLTAGE 12V 24V 48V RATED CURRENT 125A 63A 32A **CURRENT RANGE** 0~125A 0~63A 0~32A **RATED POWER** 1500W 1512W 1536W RIPPLE & NOISE (max.) Note.2 150mVp-p 150mVp-p 200mVp-p OUTPUT VOLTAGE ADJ. RANGE ±5% typical adjustment by VR, 20% ~ 110% (typ.) adjustment by 1~6VDC external control signal ±1.0% **VOLTAGE TOLERANCE Note.3** LINE REGULATION +0.5% LOAD REGULATION ±0.5% SETUP. RISE TIME 1500ms, 100ms at full load **HOLD UP TIME (Typ.)** 10ms at full load 14ms at full load 16ms at full load Note.5 90 ~ 264VAC **VOLTAGE RANGE** 127 ~ 370VDC **FREQUENCY RANGE** 47 ~ 63Hz 0.98/115VAC at full load POWER FACTOR (Typ.) 0.95/230VAC INPUT **EFFICIENCY (Typ.)** 90% 90% 86.5% AC CURRENT (Typ.) 17A/115VAC 8A/230VAC 30A/115VAC 60A/230VAC **INRUSH CURRENT (Typ.)** LEAKAGE CURRENT <2.0mA / 240VAC 105 ~135% rated output power **OVERLOAD** Protection type: Constant current limiting, recovers automatically after fault condition is removed 30 ~ 34.8V 57.6 ~ 67.2V 13 8 ~ 16 8V PROTECTION | OVER VOLTAGE Protection type: Shut down o/p voltage, re-power on to recover 105°C ±5°C (TSW2) detect on heatsink of power transistor **OVER TEMPERATURE** Protection type: Shut down o/p voltage, recovers automatically after temperature goes down **AUXILIARY POWER(AUX)** 12V@0.1A(Only for Remote ON/OFF control) **REMOTE ON/OFF CONTROL** Please see the Function Manual **FUNCTION ALARM SIGNAL OUTPUT** Please see the Function Manual 2.4 ~ 13.2V 4 8 ~ 28V 9.6 ~ 56V **OUTPUT VOLTAGE TRIM** -20 ~ +70°C (Refer to output load derating curve) WORKING TEMP. **WORKING HUMIDITY** 20~90% RH non-condensing **ENVIRONMENT** STORAGE TEMP., HUMIDITY -40 ~ +85°C, 10 ~ 95% RH **TEMP. COEFFICIENT** ±0.05%/°C (0 ~ 50°C) **VIBRATION** 10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes **SAFETY STANDARDS** UL60950-1, TUV EN60950-1 approved WITHSTAND VOLTAGE I/P-O/P:3KVAC I/P-FG:1.5KVAC O/P-FG:0.5KVAC **SAFETY & ISOLATION RESISTANCE** I/P-O/P, I/P-FG, O/P-FG:100M Ohms/500VDC **EMC EMI CONDUCTION & RADIATION** Compliance to EN55022 (CISPR22) (Note 4) HARMONIC CURRENT Compliance to EN61000-3-2,-3 **EMS IMMUNITY** Compliance to EN61000-4-2,3,4,5,6,8,11; ENV50204, EN55024, light industry level, criteria A **MTBF** MIL-HDBK-217F (25°C) 109K hrs min. **OTHERS** DIMENSION 278\*127\*83.5mm (L\*W\*H) 2.6Kg; 6pcs/16.6Kg/1.54CUFT **PACKING**


1. All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature.

2. Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1uf & 47uf parallel capacitor.

<sup>4.</sup> The power supply is considered a component which will be installed into a final equipment. The final equipment must be re-confirmed that it still meets

<sup>5.</sup> Derating may be needed under low input voltages. Please check the derating curve for more details.



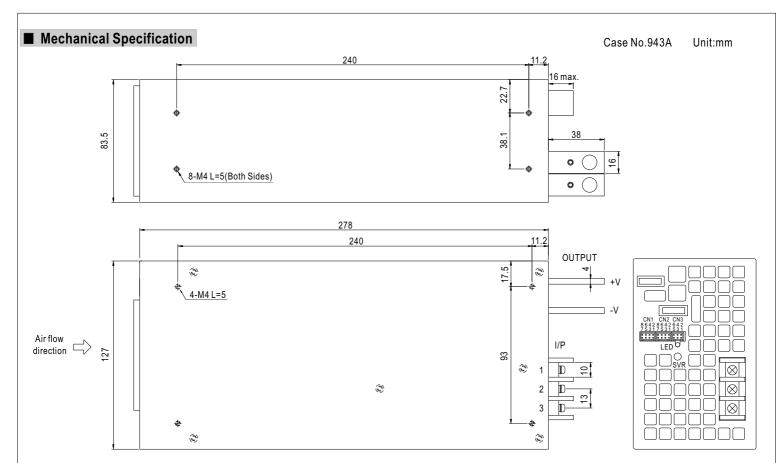

#### AC Input Terminal Pin No. Assignment

Pin No.	Assignment
1	FG ±
2	AC/N
3	AC/L

## Control Pin No. Assignment(CN1,CN2): HRS DF11-8DP-2DS or equivalent

Pin No.	Assignment	Pin No.	Assignment	Mating Housing	Terminal	
1	RCG	5,7	-S			
2	RC2	6	LS(Current Share)	HRS DF11-8DS	HRS DF11-**SC	
3	PV	8	+S	or equivalent	or equivalent	
4	PS					

RCG: Remote ON/OFF Ground

-S: -Remote Sensing

RC2: Remote ON/OFF

LS: Load Share

+S: +Remote Sensing

PV: Output voltage external control

PS: Reference voltage terminal, PS and PV are connected when shipping


## Control Pin No. Assignment(CN3): HRS DF11-6DP-2DS or equivalent

Pin No.	Assignment	Pin No.	Assignment	Mating Housing	Terminal
1	P OK GND	4	AUXG	LIDO DE 14 ODO	UD0 DE44 **00
2	POK	5	RC1	or equivalent	HRS DF11-**SC
3	RCG	6	AUX	or equivalent	or equivalent

P OK GND: Power OK Ground P OK: Power OK Signal RCG: Remote ON/OFF Ground

AUXG: Auxiliary Ground RC1: Remote ON/OFF AUX: Auxiliary Output

## **■** Block Diagram

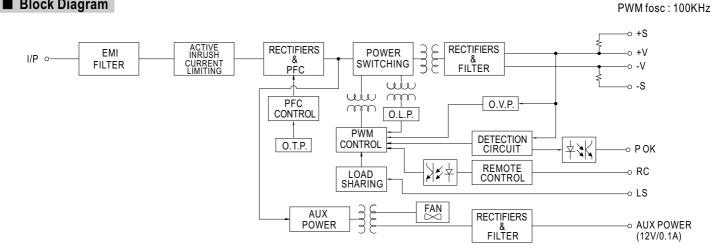


PFC fosc: 70KHz




# ■ Derating Curve

LOAD (%)

## **■** Static Characteristics

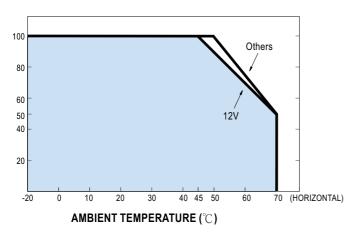

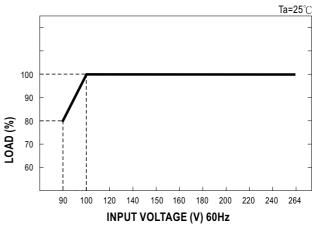

## **■** Function Manual

## 1.Remote ON/OFF


- (1)Remote ON/OFF control becomes available by applying voltage in CN1 & CN2 & CN3
- (2) Table 1.1 shows the specification of Remote ON/OFF function
- (3)Fig.1.2 shows the example to connect Remote ON/OFF control function

Table 1.1 Specification of Remote ON/OFF


Connection Method		Fig. 1.2(A)	Fig. 1.2(B)	Fig. 1.2(C)
SW Logic	Output on	SW Open	SW Open	SW Close
3 W Logic	Output off	SW Close	SW Close	SW Open

Fig.1.2 Examples of connecting remote ON/OFF


# (A)Using external voltage source

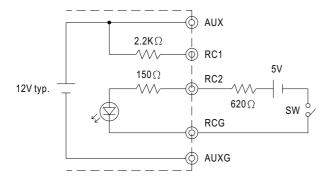

# (B)Using internal 12V auxiliary output

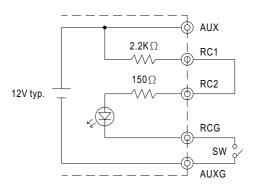

## (C)Using internal 12V auxiliary output

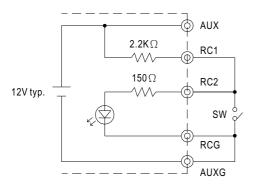



#### 2. Alarm Signal Output

- (1) Alarm signal is sent out through "P OK" & "P OK GND" pins
- (2)An external voltage source is required for this function. The maximum applied voltage is 50V and the maximum sink current is 10mA
- (3) Table 2.1 explains the alarm function built-in the power supply

Function	Description	Output of alarm(P OK)
P OK	The signal is "Low" when the power supply is above 15% of the rated output voltage-Power OK	Low (0.5V max at 10mA)
FOR	The signal turns to be "High" when the power supply is under 15% of the rated output voltage-Power Fail	High or open (External applied voltage 10mA max.)

Table 2.1 Explanation of alarm function




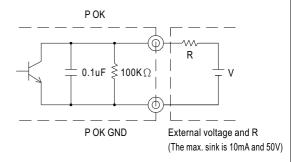


Fig. 2.2 Internal circuit of P OK (Open collector method)

#### 3.External Voltage Control

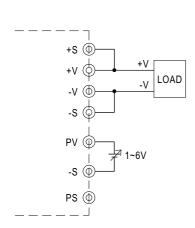

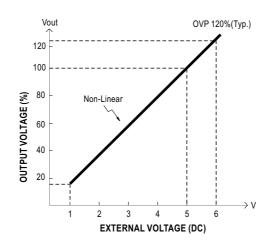

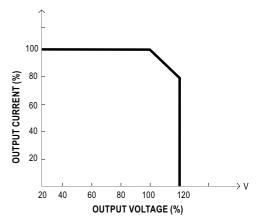

Note: Reference voltage terminal, PS and PV are connected when shipping  $\,$ 

#### 4. Current Sharing

- (1)Parallel operation is available by connecting the units shown as below (+S,-S and LS are connected mutually in parallel):
- (2) The voltage difference among each output should be minimized that less than  $\pm 2\%$  is required
- (3)The total output current must not exceed the value determined by the following equation (Output current at parallel operation)=(The rated current per unit) x (Number of unit) x 0.9
- (4) In parallel operation 3 units is the maximum, please consult the manufacturer for other applications
- (5) When remote sensing is used in parallel operation, the sensing wire must be connected only to the master unit
- Note: In parallel connection, maybe only one unit (master) operate if the total output load is less than 5% of rated load condition.
  - The other PSUs (slaves) may go into standby mode and their output LEDs will not turn on.

